




ZATJ-22S-5 Parts Breakdown


Toll Free: 1-800-579-8088 Web: www.zinko.com

REV 110507
Page 1 of 2

Jack Assembly

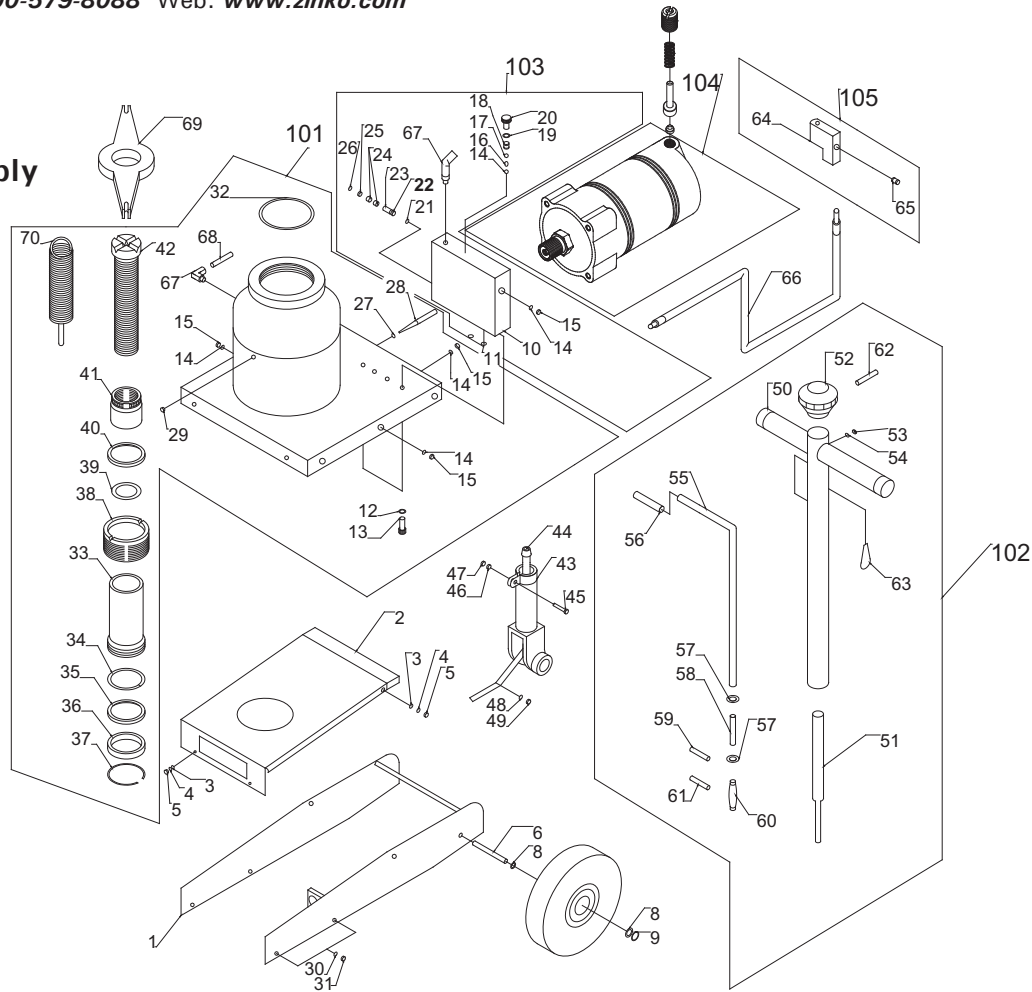

Air Pump

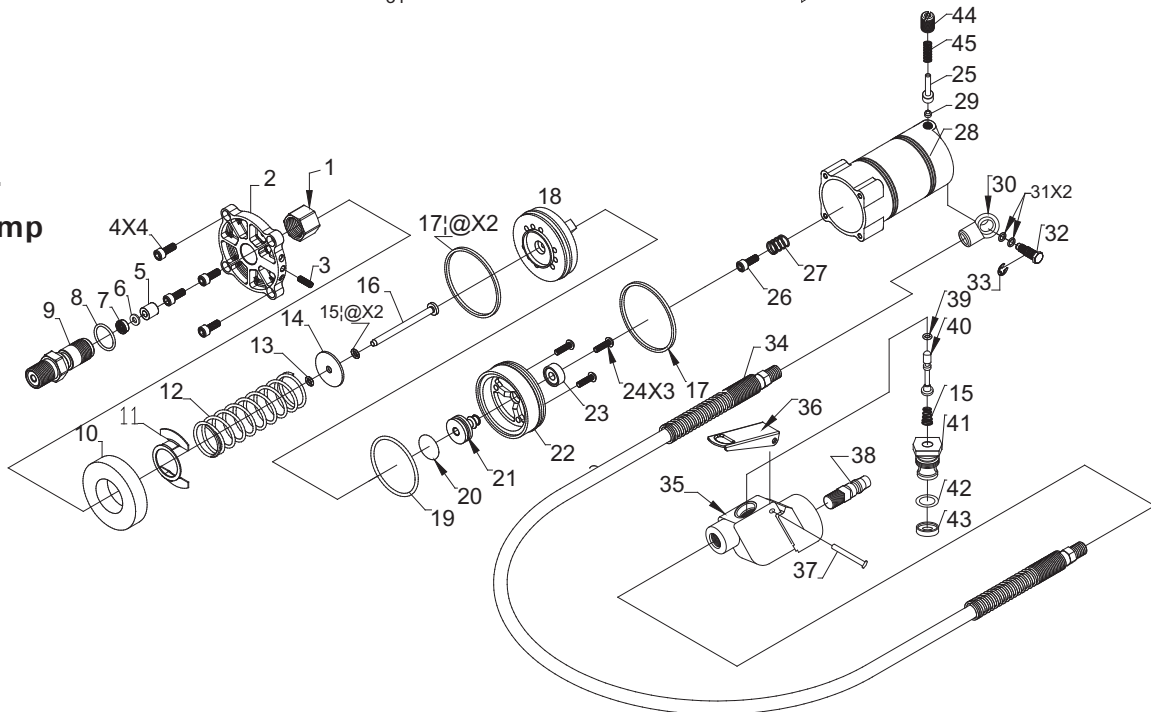



ZATJ-22S-5 Parts Breakdown

Toll Free: 1-800-579-8088 Web: www.zinko.com

REV 110507
Page 2 of 2

Jack Assembly

No.	Part #	Description	No.	Part #	Description	No.	Part #	Description
1	90602204 - 1	FRAME ASSY	27	9060220S - 28	*O-RING	53	9060220S - 62	SCREW
2	90602204 - 2	COVER	28	90602204 - 28	RELEASE STEM	54	9060220S - 63	SPRING WASHER
3	9060220S - 4	WASHER	29	9060220S - 30	OIL PLUG	55	9060220S - 64	LEVER
4	90602204 - 4	SPRING WASHER	30	90602204 - 30	SPRING WASHER	56	9060220S - 65	TUBE
5	90602204 - 5	BOLT	31	90602204 - 31	BOLT	57	9060220S - 66	WASHER
6	90602204 - 6	SHAFT	32	9060220S - 34	*O-RING	58	9060220S - 67	SPRING
7	90602204 - 7	WHEEL	33	9060220S - 42	RAM	59	9060220S - 68	COTTER PIN
8	9060220S - 9	WASHER	34	9060220S - 43	*BACKUP RING	60	9060220S - 69	LOCK PIN
9	90602204 - 9	C-RING	35	9060220S - 44	*PACKING	61	9060220S - 70	COTTER PIN
10	90602204 - 10	VALVE BLOCK	36	9060220S - 91	RAM GUIDE RING	62	9060220S - 57	SPRING PIN
11	9060220S - 13	O-RING	37	9060220S - 92	SNAP RING	63	9060220S - 96	RING
12	9060220S - 14	SPRING WASHER	38	9060220S - 45	STUFFING NUT	64	9060220S - 71	VALVE BODY
13	9060220S - 15	BOLT	39	9060220S - 46	*O-RING	65	9060220S - 77	AIR VALVE
14	9060220S - 16	VALVE BALL	40	9060220S - 47	*DUST SEAL	66	9060220S - 95	AIR HOSE
15	9060220S - 99	SCREW	41	9060220S - 48	SLEEVE	67	9060220S - 82	ELBOW
16	9060220S - 17	PIECE	42	9060220S - 49	ADJUSTING SCREW	68	9060220S - 85	TUBE
17	9060220S - 18	VALVE BALL	43	9060220S - 51	HANDLE SOCKET	69	9060220S - 94	SPRING HANGER
18	9060220S - 19	VALVE SPRING-A	44	90602204 - 44	UNIVERSAL JOINT	70	9060220S - 93	RETURN SPRING
19	9060220S - 20	COPPER PACKING	45	9060220S - 54	HI-TEN BOLT	71	9060220S - 97	ELBOW
20	90602204 - 20	BOLT	46	9060220S - 55	WASHER	101	90602204 - 101	JACK ASSY
21	9060220S - 22	VALVE BALL	47	9060220S - 56	NUT	102	9060220S - 102	HANDLE ASSY
22	9060220S - 23	S.V.BALL SEAT	48	90602204 - 48	SPRING WASHER	103	90602204 - 103	VALVE BLOCK ASSY
23	9060220S - 24	S.V.SPRING	49	9060220S - 58	BOLT	104	9060220S - 104	AIR PUMP ASSY
24	9060220S - 25	S.V. ADJUSTING SCREW	50	9060220S - 59	HANDLE	105	9060220S - 105	AIR VALVE ASSY
25	90602204 - 25	*S.V.PACKING	51	9060220S - 60	RELEASE ROD	106	90602204 - 106	REPAIR KIT
26	90602204 - 26	PUSH NUT	52	9060220S - 61	KNOB	AD	90602204 - AD	*ADAPTOR KIT ₁

₁ (Set of 2) consisting of 9060220S- and 9060220S-AD3.

Air Pump

Part #	Description
9060667- 1	NUT
9060667- 2	BOTTOM CAP
9060667- 3	ADJUST PIN
9060667- 4	CAP SCREW
9060667- 5	*SEAL RING
9060667- 6	*BACKUP RING
9060667- 7	*U-CUP RING
9060667- 8	*O-RING
9060667- 9	CYLINDER BOLT
9060667- 10	*SILENCER
9060667- 11	U STYLE GASKET
9060667- 12	SPRING
9060667- 13	CUSHION
9060667- 14	PISTON PLATE
9060667- 15	*O-RING

Part #	Description
9060667- 16	PISTON ROD
9060667- 17	*O-RING
9060667- 18	PISTON B
9060667- 19	*O-RING
9060667- 20	*O-RING
9060667- 21	VALVE
9060667- 22	PISTON A
9060667- 23	PILOT PISTON CUSHION
9060667- 24	*SCREW
9060667- 25	PISTON
9060667- 26	HEX SCREW
9060667- 27	SPRING
9060667- 28	CYLINDER
9060667- 29	PLUG
9060667- 30	SWIVEL

Part #	Description
9060667- 31	*O-RING
9060667- 32	AIR INLET BOLT
9060667- 33	E-RING
9060667- 34	AIR HOSE
9060667- 35	A.V. BODY
9060667- 36	LEVER
9060667- 37	PIN
9060667- 38	QUICK COUPLER
9060667- 39	*O-RING
9060667- 40	A.V. PISTON
9060667- 41	A.V. CYLINDER
9060667- 42	*O-RING
9060667- 43	GASKET
9060667- 44	HEX SCREW
9060667- 45	SPRING
96-519734	REPAIR KITS (ALL *)