


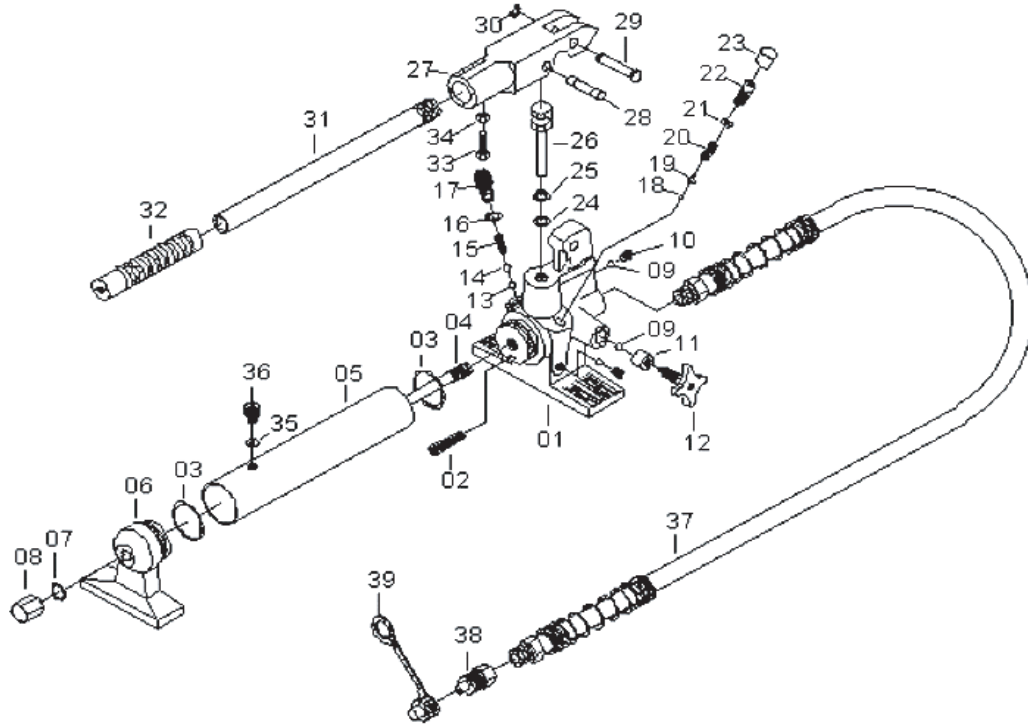

# ZHP-18 & ZHP-28 Parts Breakdown

Toll Free: 1-800-579-8088 Web: [www.zinko.com](http://www.zinko.com)

REV 101607



No.	Description	ZHP-18	ZHP-28
1	Pump Housing	922-018-01	
2	Oil Filter	922-018-02	
3	*O-Ring	RP	
4	Screw	922-018-04	
5	Reservoir	922-018-05	922-028-05
6	Tail Base	922-018-06	
7	*O-Ring	RP	
8	Nipple	922-018-08	
9	Check Ball	922-018-09	
10	Set Screw	922-018-10	
11	*O-Ring	RP	
12	Release Valve	922-018-12	
13	Check Ball	922-018-13	
14	Check Ball	922-018-14	
15	Spring	922-018-15	
16	Washer	922-01816	
17	Valve Cover Screw	922-018-17	
18	Check Ball	922-018-18	
19	Spring End Cap	922-018-19	
20	Spring	922-018-20	

No.	Description	ZHP-18	ZHP-28
21	*O-Ring	RP	
22	Overload Cover Screw	922-018-22	
23	Cap	922-018-23	
24	*O-Ring	RP	
25	*Back-Up ring	RP	
26	Piston	922-018-26	
27	Yoke	922-018-27	
28	Piston Pun	922-018-28	
29	Yoke Pin	922-018-29	
30	Retaining Ring	922-018-30	
31	Handle	922-018-31	922-028-31
32	Handle Grip	922-018-32	
33	Screw	922-018-33	
34	Nut	922-018-34	
35	*O-Ring	RP	
36	Air Release Screw	922-018-36	
37	Hose	922-018-37	
38	Coupler 1/4" L type -H	9210104L-H	
39	Plastic cap for coupler	included in #38	
RP	Repair kits (All * above)	9219401-RP	