


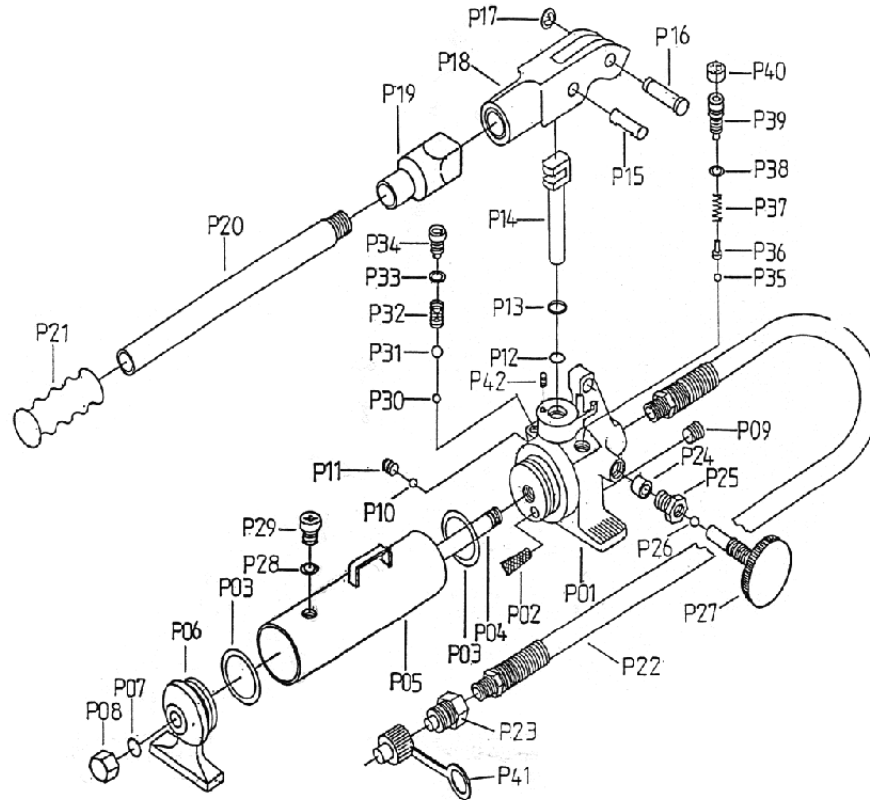

# ZHP-42 Parts Breakdown

Toll Free: 1-800-579-8088 Web: [www.zinko.com](http://www.zinko.com)

REV 101607



Part #	Description
P01	Pump Housing
P02	Oil Filter
P03	O-Ring
P04	Screw
P05	Reservoir
P06	Tail Base
P07	O-Ring
P08	Nipple
P09	Screw
P10	Check Ball
P11	Set Screw
P12	O-Ring
P13	Backup Ring
P14	Pump Piston
P15	Piston Pin
P16	Yoke Pin
P17	Retaining Ring
P18	Yoke
P19	Yoke Grip
P20	Handle
P21	Handle Grip

Part #	Description
P22	Screw
P23	Couplers
P24	Oil Seal
P25	Couplers
P26	Check Ball
P27	Release Valve
P28	O-Ring
P29	Screw
P30	Check Ball
P31	Check Ball
P32	Spring
P33	Washer
P34	Screw
P35	Check Ball
P36	Spring End Cap
P37	Spring
P38	O-Ring
P39	Screw
P40	Plastic Cap
P41	Dust Cap
P42	Set Screw