





## ZPJ-55A Parts Breakdown

Toll Free: 1-800-579-8088 Web: [www.zinko.com](http://www.zinko.com)

REV 100107  
Page 2 of 2

#	Description
1	Handle Cap
2	Roll Pin
3	Roll Pin
4	Control Rod
5	Control Lever
6	Control Rod
7	Operating Handle
8	Pressure Roller Axle
9	Pressure Roller
10	Pressure Roller Bush
11	Roll Pin
12	Chain Lock
13	Handle Bushing
14	Lower Flat Bar Spring
15	Sealed Nut
16	Spring Holder
17	Pressure Spring
18	Roll Pin
19	Crank Pin
20	Bearing Cup
21	Snap Ring
22	Thrust Bearing
23	Thrust Seat
24	Snap Ring
25	Snap Ring
26	Steering Wheel
27	Dust Protector
28	Thrust Bearing
29	Pressure Plate
30	Bearing Bushing

#	Description
31	Snap Ring
32	Roll Pin
33	Steering Wheel Axle
34	Bearing
35	Bearing Spacer
36	Snap Ring
37	Lower Valve Bar
38	Snap Ring
39	Lift Piston
40	Dust Seal
41	Ton Nut
42	O-Ring
43	Piston Bushing
44	U Packing
45	Retainer Washer
46	Snap Ring
47	O-Ring
48	Plug
49	Jack Body
50	Bust Seal
51	Pump Piston
52	U Packing
53	Pump Cylinder
54	O-Ring
55	Back Valve Screw
56	O-Ring
57	Valve Spring
58	Lowering Valve
59	Valve Seat
60	O-Ring

#	Description
61	Steel Ball
62	Roll Pin
63	Back Valve Spring
64	Pressure Pin
65	O-Ring
66	O-Ring
67	Release Pin Guide
68	Rubber Bushing
69	Lowering Pedal
70	Push Bolt
71	Hex Nut
72	Torsion Tube
73	Arm Bushing
74	Arm Bolt
75	Roll Pin
76	Snap Ring
77	Bushing
78	Torsion Tube Axle
79	Push Rod
80	Bushing 20.4x24x30
81	Bearing
82	Load Wheel
83	Load Wheel Axle
84	Roll Pin
85	Wheel Fork Axle
86	Spacer Wheel
87	Wheel Fork
88	Push Rod Axle
89	Push Rod Bushing
RP	Seal Kit